

PICKUP POINT SETUP STEPS

LX Suite

Steps to set up a new LX Suite Pickup Point (PuP)

1. Tenant in eLoxx 365

Make sure you have an active tenant in the eLoxx 365 **Production** environment.

2. Connect the hardware

Connect the locks and the sub controller(s) to the GT7 terminal. The locks used for LX Suite can be either the GAT SMART.Lock or GAT NET.Lock.

NOTE! Refer to the respective device manual for instructions.

3. Configure the locks in eLoxx 365

Configure the locks in eLoxx 365. Since the connection data will not be displayed again, it is strongly recommended that you save this information for future reference.

4. Name the lockers

Name the lockers using the following format (one separate locker view per format type recommended). Note that the values in square brackets are important and must come at the start of the name:

- [XS] nn
- [Small] nn
- [Medium] nn
- [Large] nn
- [XL] nn

NOTE! Here, nn stands for the locker number.

5. Create locker view

Create a locker view for the Pickup Point. The required locker mode is "Personal Locker".

6. Provide Pickup Point information

To create a new Pickup Point, download the required LX Suite PuP Information Form from the Gantner website here:

<https://www.gantner.com/en/download-file/mecCYHjoDW?qr=ovCGxJe4tV>

Please fill out the form and send it to your respective contact person at Gantner customer care.

7. Get GT7 terminal data

Retrieve the Device ID of the GT7 terminal (see instructions on page 2) and the Tenant Secret (see instructions on page 4). Enter these details into the LX Suite PuP Information Form. Contact Gantner Support if you need help retrieving this data from eLoxx 365.

IMPORTANT! For the GT7 terminal add-on BUS, only the active terminal may exist. Any other terminals must be removed.

GT7 terminal requirements

- Firmware min. V3.8.0 must be installed.
- Add license points to the GT7 device (minimum 60 points required for the test application).
- Install the **LX Suite - Parcel Delivery App** (GT7 App).
- Enable **Emergency Mode** in the GT7 App.
- Add a **Barcode Data Carrier**
- Adjust the **Sub Controller** settings in the GT7.

GT7 barcode data carriers setting


- QR code minimum length: 1
- QR code maximum length: 7089

RFID data carriers setting


- Disable the **Certificate Check** for RFID data carriers.
- Remove locker segments (delete) from data carrier list.

How to find the Device ID in eLoxx 365

- Click on **Devices** in the sidebar.

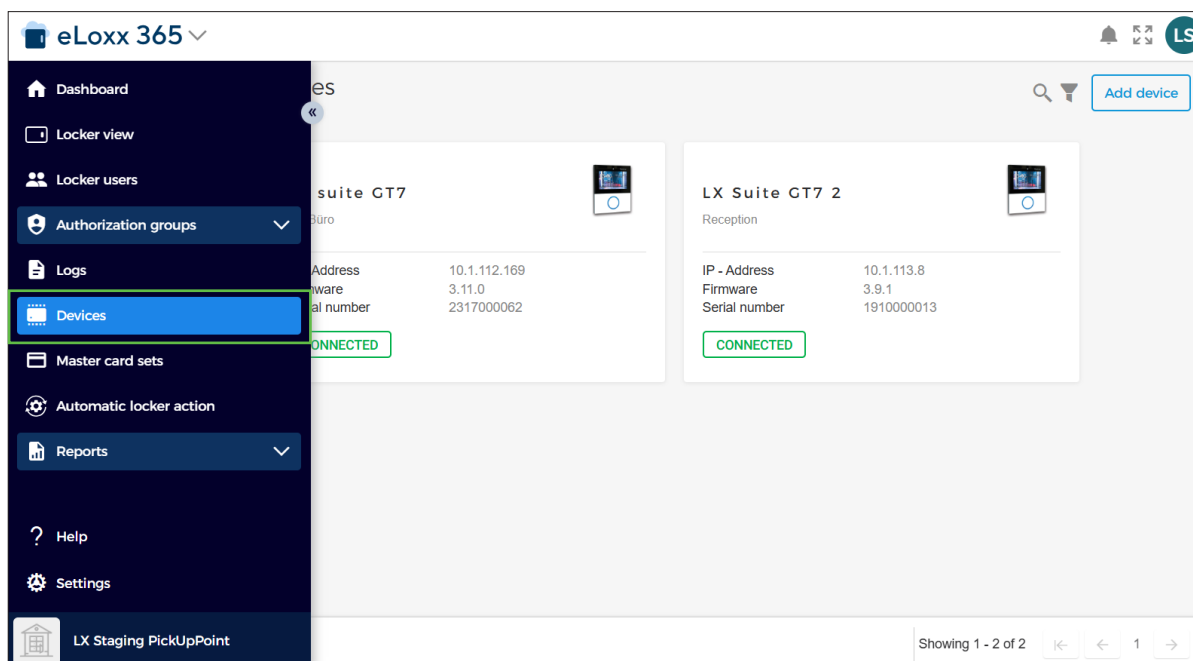


- Click on the GT7 terminal that will be used for the LX Suite Pickup Point.

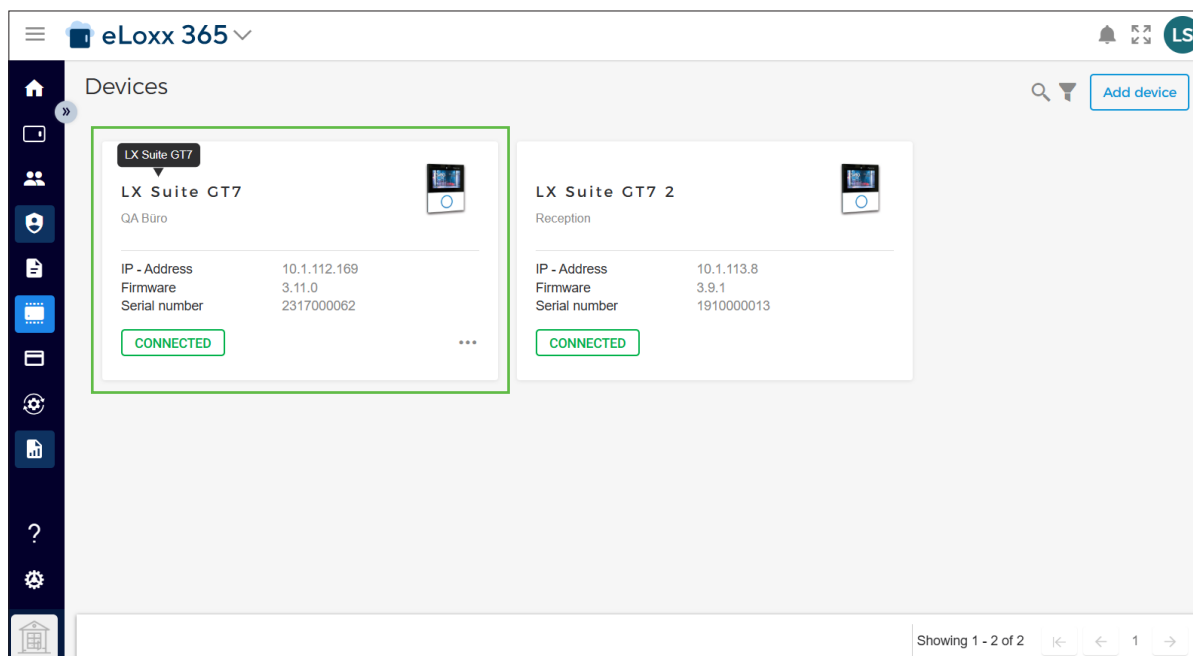

How to find the Device ID in eLoxx 365


- The device details page is displayed.

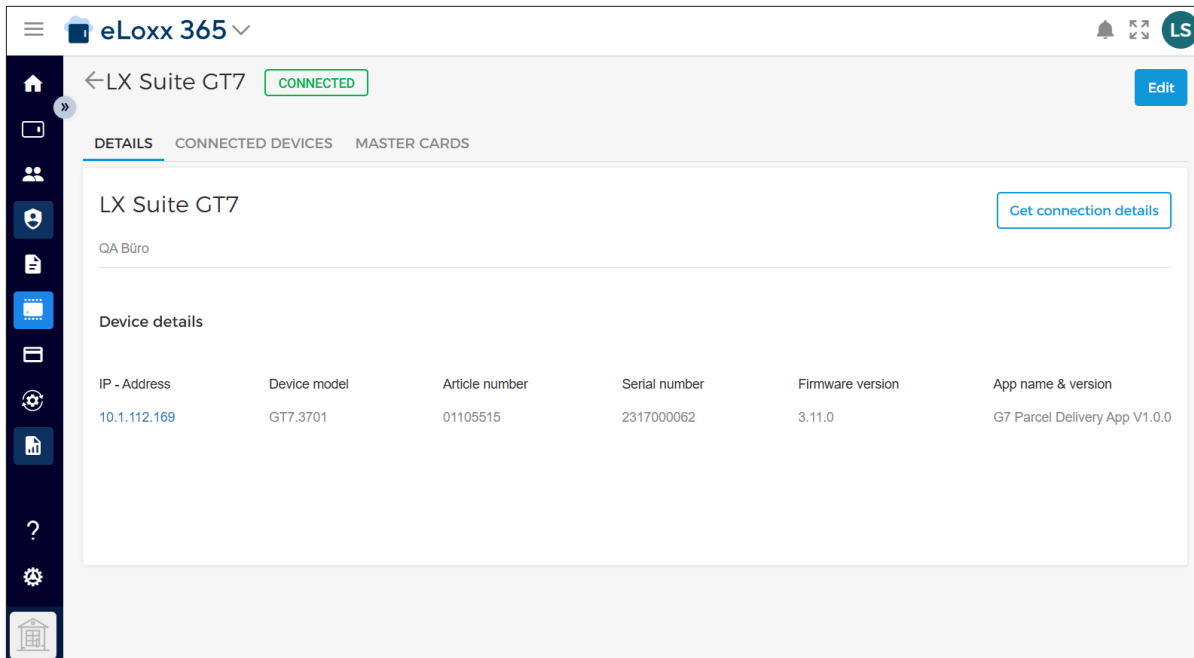

- The Device ID can be found in the URL of this page. The following URL provides an example:
<https://eloxx.enviso.io/devices/39383216-d50e-37e0-513b-4842d335a8d2/detail>


The Device ID is this value underlined in the URL.

Copy the value and enter it into the Pickup Point Information Form (see step 6 in "Steps to set up a new LX Suite Pickup Point" on page 1).

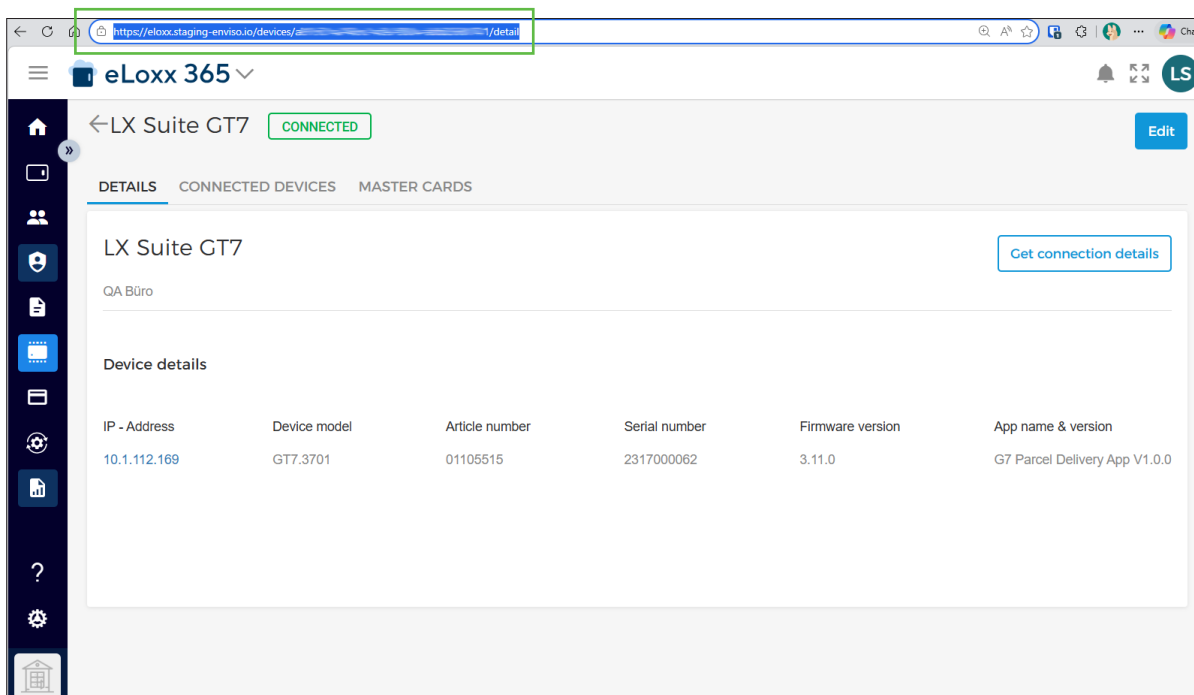


How to find the Tenant Secret in eLoxx 365

- Click on **Devices** in the sidebar.

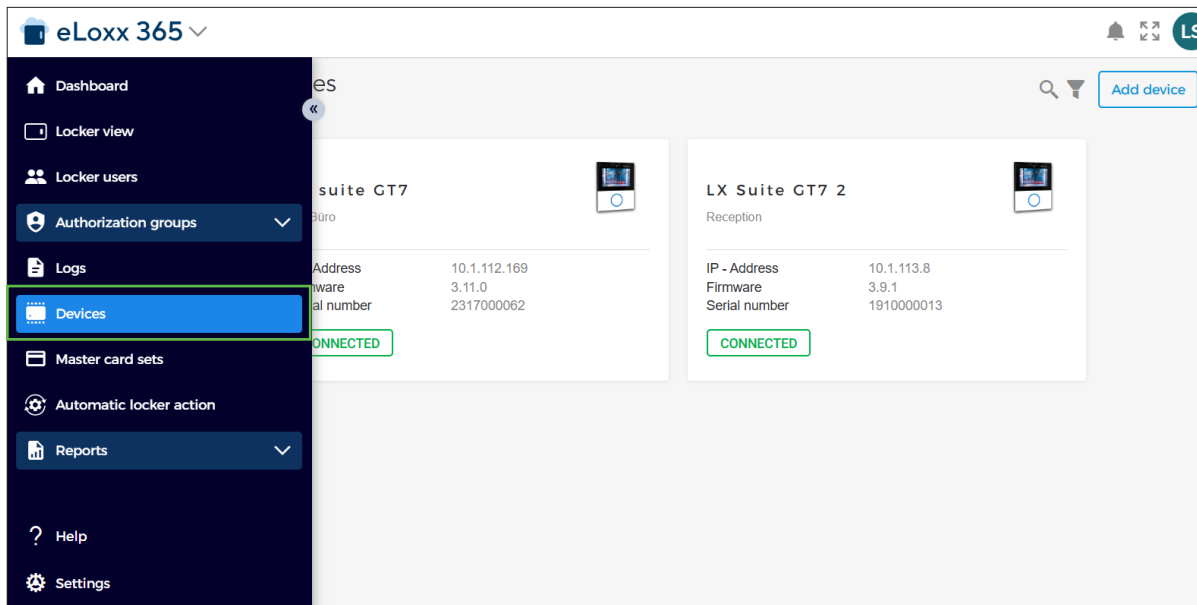


- On the keyboard, press **Ctrl + Shift + I**
→ The window is divided into two sections.
- Click on the **Network** tab at the top right and then click the **Reload page** button.

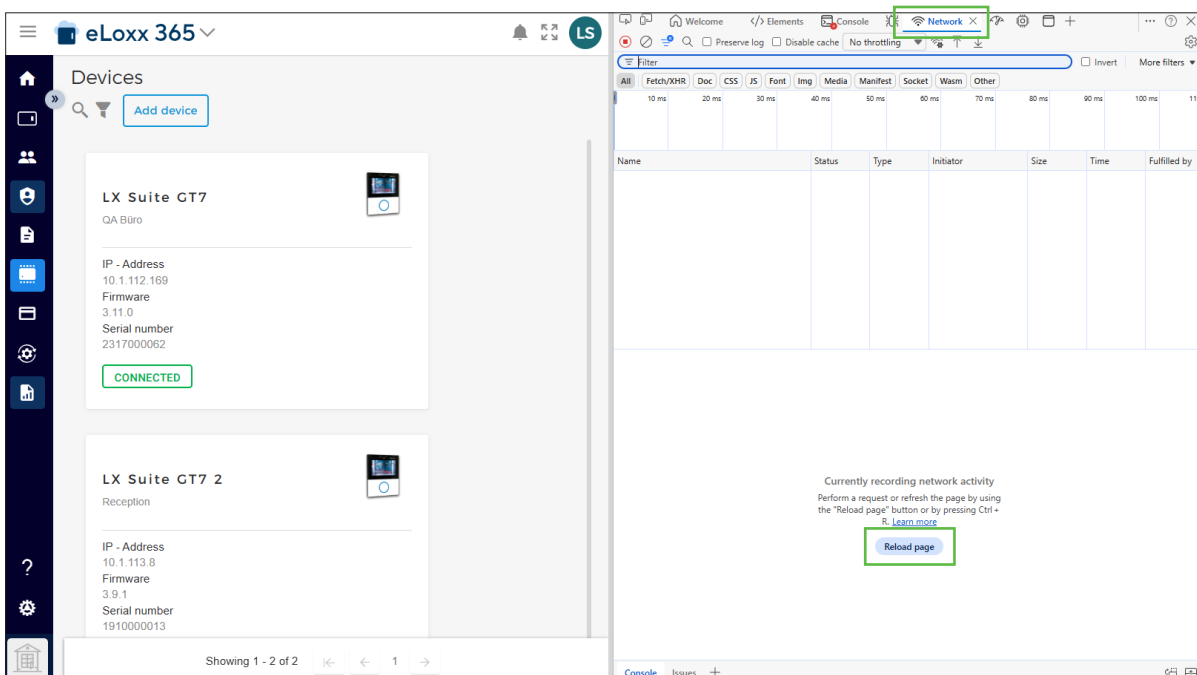

How to find the Tenant Secret in eLoxx 365

- On the right side of the window, various technical information is displayed.

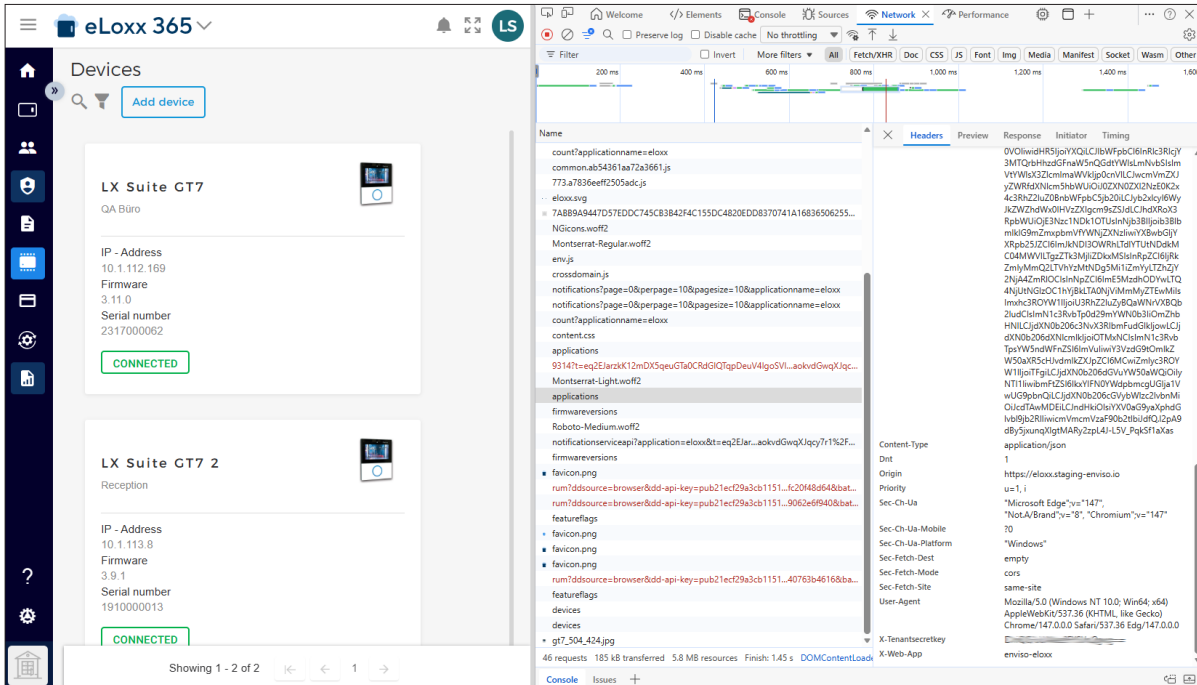

- Scroll down the parameter list to find a parameter named **X-Tenantsecretkey**. Next to this parameter is a value that usually ends with two equal signs (==). This value is the Tenant Secret. Copy this value and enter it into the "Pickup Point Information Form" (refer to step 6 on page 1).

